How to Clean the Impeller
Zeus 900

Tools Needed:
Phillips Head Screwdriver
Drill with Phillips Head Bit (optional)
Socket Wrench

1. First, you will need to disassemble the housing, so you have access to impeller.
2. To do this, place the 900 face down, then use the screwdriver to remove the 2 screws at the bottom of the machine.

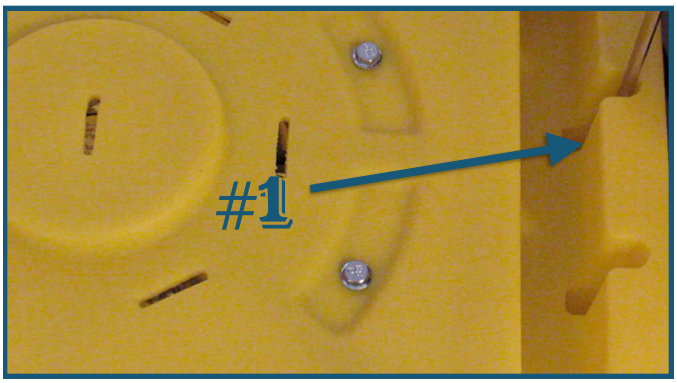

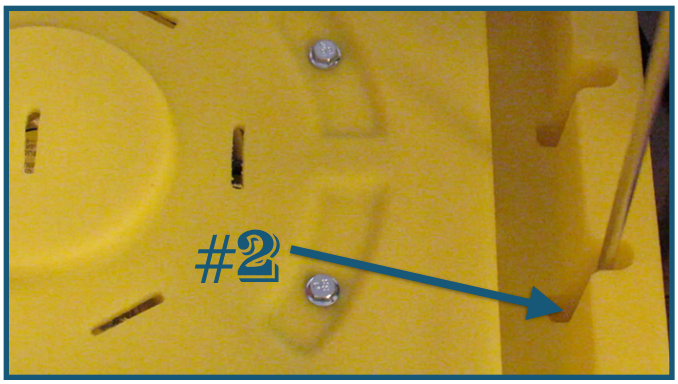

3. Next, use a socket wrench to remove the 4 remaining screws on the back of the air mover.

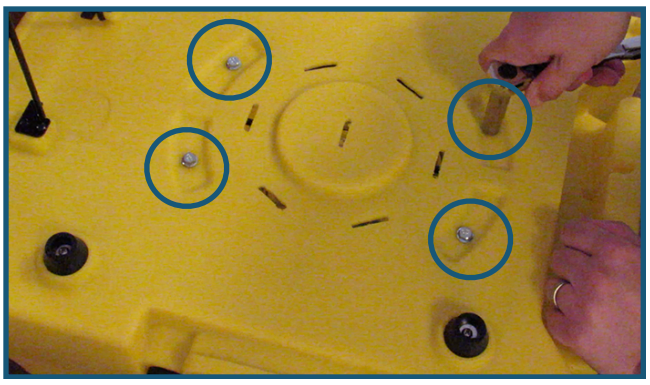

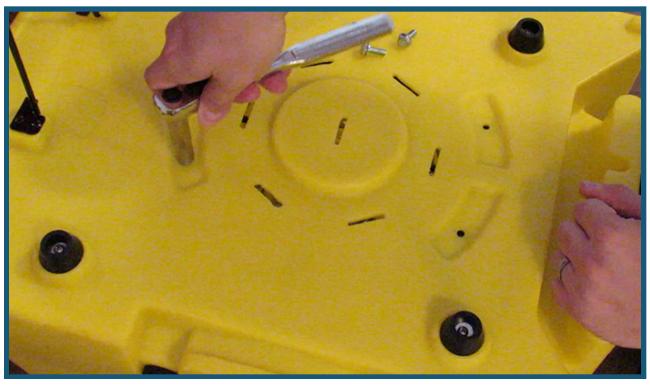

4. Once the screws on the back are removed, flip the air mover over, so you can remove the 4 screws on the front face plate.

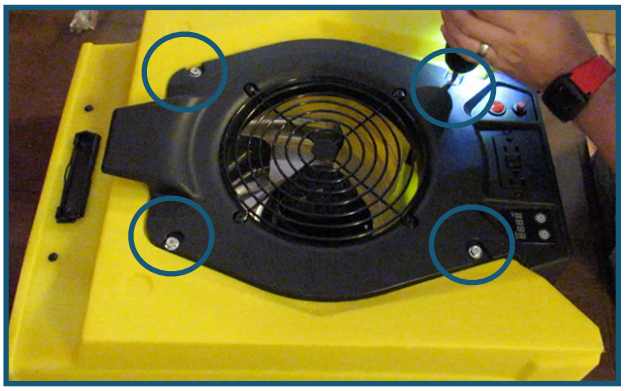

5. Carefully, lift off the face plate (it will still be connected to the impeller).
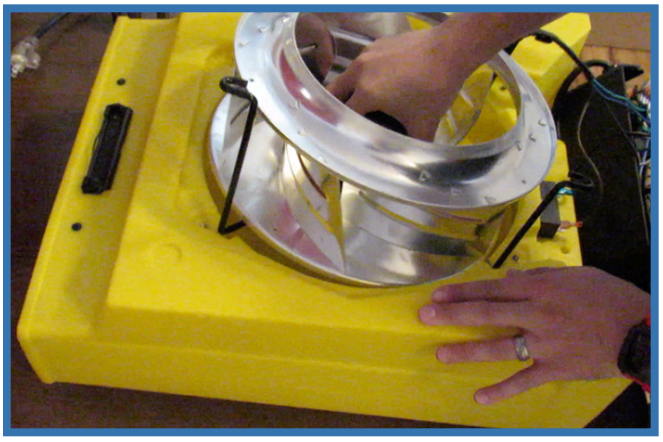
6. Finally, remove the impeller from the housing. Once the impeller is removed, clean with a dry cloth or pressurized air. DO NOT USE LIQUIDS.